

Warranty

HL corp warrants all HL made accessories for a period of one year from the date of purchase. This warranty is expressly limited to the repair or replacement of the defective part and is the sole remedy of the warranty. This Warranty applies only to the original owner and is not transferable. Proof of purchase is required. The warranty does not include normal wear and tear, follow up maintenance or improper installation of the accessory. The warranty does not apply to damage or failure due to accident, abuse or neglect. Modification of the accessory in any manner shall void the warranty. HL corp. shall not be responsible for incidental or consequential damages. Labor charges or the individual costs incurred by the dealer are not covered in the warranty. The user assumes the risk of any personal injury or property damage including damage to the accessory or other losses, if the accessory is modified or used at any time for stunt riding or similar activities. Power or motor assist of any kind or anything other than normal use. This warranty gives the consumer specific legal rights and those rights may vary from state to state. This warranty does not affect the statutory rights of the consumer.



55 ZHONG HUAN ROAD, 4TH INDUSTRIAL PARK,
LONGHUA TOWN, BAOAN DISTRICT,
SHENZHEN 518109 P.R. CHINA
TEL: 86-755-27749423
FAX: 86-755-27747799/27744140
E-MAIL: sales-a@hlcorp.com.cn

The basics (We know you know, we're just reminding you)

- 1) Work clean.
- 2) Plan the job beforehand. Get any tools or new parts you know you will need ahead of time.
- 3) Be patient-work like a pro. Don't force anything that shouldn't be.
- 4) Do the work when you have some time not just before a ride.
- 5) Ride your bike cautiously after you've worked on it.
Check it out carefully until you are confident it is right.
- 6) Take it to the shop if you don't know what you are doing.
- 7) Ask questions. Wait for good answers before you proceed.
- 8) Don't throw this booklet away. Refer to it as you have questions regarding this part.



SP-78N/80N/70/71/360/371

USER MANUAL

Thanks for choosing HL SP-78N/80N/70/71/360/371

This is high performance, lightweight part. It will give you reliable service if it is installed and maintained properly. Please read through these instructions completely before you install your new seat post. Follow them carefully.

IF YOU ARE NOT AN EXPERIENCED BICYCLE MECHANIC, OR DO NOT HAVE CORRECT TOOLS FOR THIS JOB, PLEASE TAKE THE PARTS AND THE INSTRUCTIONS TO YOUR FAVORITE BIKE SHOP. LET THEM DO THE WORK. DO NOT MODIFY THESE SEAT POSTS, MODIFICATION MAY RESULT IN FAILURE AND COULD CAUSE SEVERE PERSONAL INJURY. MODIFICATION OF THE SEAT POST WILL ALSO VOID THE WARRANTY.

SP-78N/80N/70/71/360/371

Product Feature

- 1) Suspension travel: 40mm
- 2) Made with aerospace grade material
6061-T6 aluminum alloy.
- 3) Progressive coil spring (A) and elastomer (B) for optimum suspension function.
- 4) Pre-loaded adjuster nut (E) for suspension function adjustability.

Caution

- 1) Tighten threaded collar for freeplay adjustment to stop shaft side-play.
- 2) If you feel the product is not functioning properly or user weight changes, you may use allen key to adjust the tension of coil spring from the nut (E) and/or threaded collar (C). After adjustment, nut (E) shall be fully engaged inside the tube (F).

